

Thank you for purchasing this Fit & Forget battery operated product. Please read the instructions and warnings carefully before use to ensure safe and satisfactory operation of this product.

### What is Fit & Forget?

**Fit & Forget** is our patented timer technology which guarantees 72 days use\* from one set of batteries

\*For maximum 72 days performance, please ensure any function is selected APART FROM STEADY ON. Operating in STEADY ON mode will enable the set to last 60 days. It is recommended that good quality alkaline batteries are used.

### Please Note

- This battery-operated item is designed for indoor and outdoor use.
- Uses non replaceable LEDs (light emitting diodes), which last longer than traditional incandescent (or filament) bulbs.
- Batteries are not included.

### Instructions for use

1. Carefully remove the product from the packaging.
2. Remove the battery compartment cover by gently pulling the latch from box and pulling the cover towards you
3. Insert 3 x C batteries
4. Replace cover ensuring the latch clicks into place
5. The power and function button is located on the battery compartment
6. To turn off, hold function button for 5 seconds


### Changing the Batteries

To change the batteries, remove the lid from the battery compartment by unclicking the locking mechanism. Insert 3 x AA size batteries. Ensure the flat face (negative) end of the batteries align with the spring contacts within the battery compartment. Batteries should be removed and replaced by adults only.

- Use only recommended batteries or those of the same or equivalent type.
- Do not mix old and new batteries or batteries of a different type.
- Batteries are to be inserted with the correct polarity. The supply terminals are not to be short circuited.
- Always remove exhausted batteries from the product.
- Remove batteries if the set is not used for extended periods of time.
- Do not attempt to re-charge non rechargeable batteries.
- Rechargeable batteries are to be removed from the item before recharging. Rechargeable batteries are only to be charged under adult supervision.
- Batteries contain substances that may be harmful to the environment and human health.
- Keep out of reach of children and seek immediate medical help if swallowed.
- Never throw batteries in a fire or attempt to open the outer casing.

### Warnings

- This product is a decoration not a toy. Keep out of reach of young children as may contain small parts that could represent a choking hazard.

 **Complies with (EN62115, EN62471, EMC, RoHS)**



This symbol indicates that electrical products should not be disposed of in the normal household waste but taken to appropriate local recycling facilities, where and when these are available. Contact your local authority for details of local recycling schemes

### Customer Support



**NOMA Customer Services**  
Leisuregrow Products Ltd, Dewmead Farm,  
New Inn Road, Hinxworth, Hertfordshire SG7 5HG



consumerservices@leisuregrow.com



+44 (0)1462 744500